


How to Order a Foot Pedal - Mechanical



Ordering the foot pedal that meets your needs is not difficult. Simply follow the instructions below to create the assembly part number. The first five numbers will be followed by three numbers that are chosen from the charts below.

- 1. Choose either a 2" or 3" Travel. This number is your BASIC NUMBER.
- 2. Choose the appropriate options from charts 1, 2, and 3.
- 3. Place each option number that you have chosen into its corresponding colored box. These create your ASSEMBLY CODE.
- 4. Combine all eight numbers to create the ASSEMBLY PART NUMBER. For example, the final assembly part number could possibly be 95002-300. (2" travel, 3 series, no heel rest, no modulator)

Assembly Part Number

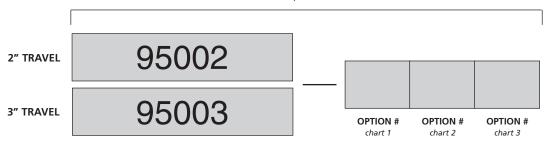

CABLE SERIES OPTIONS CHART 1				
3 Series	3	4 Series	4	

HEEL REST OPTIONS CHART 2				
No Heel Rest	With Heel Rest			

MODULATOR PIVOT CHART 3				
No Modulator	0	With Pivot Modulator	1	

Foot Pedal Service Parts

Cable Hanger Kit

99000-1 = 2" Travel 99000-2 = 3" Travel

Includes: Hanger Assembly Flange Nuts (2) Cable Attach Kit

99001-1 = 3 Series 99001-2 = 4 Series

Includes:

Lock Plate Assembly and Screw Pin and Hair Pin Cotter

Clevis

Upper Boot Kit

99002-1

Includes: Upper Boot Pin and Hair Pin Cotter

Jam Nut

Heel Rest Kit

99003-1

Includes: Heel Rest

Self Tap Screws (2)

Modulators for Foot Pedal *

Modulators

98000-Length = 2" Travel 98001-Length = 3" Travel

Allison Transmissions Only

Cables *

3 Series 4 Series # 10-32UNF-2A 1/4-28UNF-2A

352X3-Length = 2" Travel 452X3-Length = 2" Travel 453X3-Length = 3" Travel 453X3-Length = 3" Travel

Other configurations available. Consult Factory. X = Specify 2 for bulkhead, 3 for clamp.

^{*} Felsted cables and modulators must be used to engage keyhole mounting system.